





### **Executive Summary**

There are approximately 30,000 high-pressure, onshore gas wells producing 4 trillion cubic feet (Tcf) of natural gas annually in the United States. About 700 of these wells have conventional glycol dehydrators, emitting an estimated 1 billion cubic feet (Bcf) of methane per year to Glycol dehydrators vent methane, the atmosphere. volatile organic compounds (VOCs), and hazardous air pollutants (HAPs) to the atmosphere from the glycol regenerator and also bleed natural gas from pneumatic control devices. This process wastes gas, costs money, and contributes to local air quality problems as well as global climate change.

Natural Gas STAR Partners have found that replacing glycol dehydrators with desiccant dehydrators reduces methane, VOC, and HAP emissions by 99 percent and also reduces operating and maintenance costs. In a desiccant dehydrator, wet gas passes through a drying bed of desiccant tablets. The tablets pull moisture from the gas and gradually dissolve in the process. Since the unit is fully enclosed, gas emissions occur only when the vessel is opened, such as when new desiccant tablets are added.

Economic analyses demonstrate that replacing a glycol dehydrator processing 1 million cubic feet per day (MMcfd) of gas with a desiccant dehydrator can save up to \$9,232 per year in fuel gas, vented gas, and operation and

maintenance (O&M) costs and reduce methane emissions by 444 thousand cubic feet (Mcf) per year. This Lessons Learned study describes how Partners can identify areas where desiccant dehydrators can be implemented and determine their economic and environmental benefits.

#### **Technology Background**

Produced natural gas is normally saturated with water. If not removed, the water can condense and/or freeze in gathering, transmission, and distribution piping causing plugging, pressure surges, and corrosion. To avoid these problems, the produced gas is typically sent through a dehvdrator where it contacts a dewatering agent such as triethylene glycol (TEG), diethylene glycol (DEG), or propylene carbonate. In the most common process, glycol dehydration, the TEG absorbs water from the gas along with methane, VOCs, and HAPs. The absorbed water and hydrocarbons are then boiled off in a reboiler/regenerator and vented to the atmosphere. (See EPA's Lessons Learned: Optimize Glycol Circulation and Install Flash Tank Separators in Glycol Dehydrators.)

Natural Gas STAR Partners have reported success using an alternative method for drying gas: desiccant dehydrators. These dehydrators use moisture- absorbing salts to remove water from the gas without emitting large quantities of methane, VOCs, or HAPs.

		Econo	omic an	d Envir	onment	tal Benefits				
Method for	Methane Emissions	Volume of Natural Gas		e of Natura ings (\$/ye		Implementation	Other Costs	Payl	back (Mor	iths)
Reducing Natural Gas Losses <sup>a</sup>	Savings (Mcf/year) <sup>b</sup>	Savings (Mcf/year) <sup>c</sup>	\$3 per Mcf	\$5 per Mcf	\$7 per Mcf	Cost (\$) <sup>d</sup>	(\$/ year) <sup>e</sup>	\$3 per Mcf	\$5 per Mcf	\$7 per Mcf
Replacing a Glycol Dehydrator with a Desiccant Dehydrator	444	1,063	\$3,189	\$5,315	\$7,441	\$15,787	\$(1,791)	38	27	21

Difference between methane vented from the glycol and desiccant dehydrators.

<sup>c</sup> Sum of net gas emissions reductions and fuel gas savings.

<sup>d</sup> Installed cost of desiccant dehydrator minus surplus equipment value for the replaced glycol dehydrator.

e Difference between glycol and desiccant dehydrators O&M costs.

#### Desiccants

Deliquescent salts, such as calcium, potassium and lithium chlorides, have been used by the oil and gas industries to dehydrate petroleum products for more than 70 years. These salts naturally attract and absorb moisture (hygroscopic), gradually dissolving to form a brine solution. The amount of moisture that can be removed from hydrocarbon gas depends on the type of desiccant as well as the temperature and pressure of the gas. Calcium chloride, the most common and least expensive desiccant, can achieve pipeline-quality moisture contents at temperatures below 59°F and pressures above 250 psig. Lithium chloride, which is more expensive, has a wider operating range: up to 70°F and above 100 psig. Appendix A provides equilibrium moisture contents of natural gas dehydrated by commercially available calcium and lithium chloride salts.


#### **Process Description**

A desiccant dehydrator is a very simple device; it has no moving parts and needs no external power supply; therefore, it is ideal for remote sites.

As shown in Exhibit 1, wet natural gas enters near the bottom of the dehydrator vessel, below the desiccant support grid. The support grid and ceramic ball pre-bed prevent the desiccant tablets from dropping down into the brine sump (claim area). The wet gas flows upward through the drying bed. When the gas comes into contact with the surface of the tablets, the desiccant salts remove water vapor from the gas (hydrate). As the desiccant continues to remove water vapor from the gas, droplets of brine form and drip down through the drying bed to the brine collection sump (claim area) at the bottom of the vessel. This brine formation process gradually dissolves the desiccant.

Brine collected in the claim area can be periodically drained to either a brine (or produced water) storage tank, or (where permitted) to an evaporation pond. Produced water and brine may be deep-well injected near the site, or periodically picked up for disposal offsite.


With a drying bed of sufficient depth, the gas reaches equilibrium moisture content with the desiccant before it reaches the top of the drying bed. Excess salt, above the minimum depth needed to achieve equilibrium moisture content, is referred to as the "working salt bed." This working inventory is refilled periodically. To avoid halting gas production or bypassing wet gas to a sales line when refilling the desiccant dehydrator, most installations use a

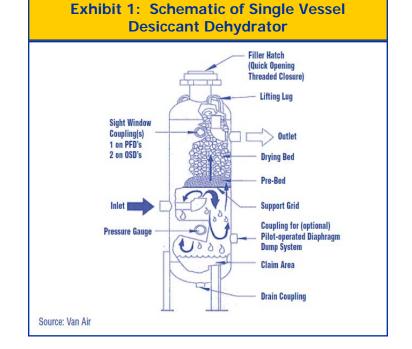

minimum of two vessels: one in drying service while the other is being refilled with salt.

#### **Operating Requirements**

To protect their pipelines, producers dry gas to a dew point below the minimum temperature expected in the pipeline. If the gas is not dried appropriately, water and other free liquids can precipitate as the gas cools which can lead to pipeline blockage or corrosion. To avoid this, producers normally dehydrate gas to a pipeline moisture specification between 4 and 7 pounds of water per MMcf of gas. Desiccant performance curves show the temperature and pressure combinations that will result in gas meeting pipeline moisture standards. Exhibit 2, derived from the moisture content table in Appendix A, shows the gas temperature and pressure combinations that would result in 7 pounds of water per MMcf of gas for two of the most The shaded region above the common desiccants. saturation line in Exhibit 2 represents a "safe operating region" for calcium chloride dehvdrators where the gas will be at or below pipeline moisture specification. Operators use these curves to determine the minimum gas pressure required to ensure a given moisture content. In this example, an inlet gas at 47°F passing through a calcium chloride desiccant dehydrator must be pressurized to at least 450 psig to meet the 7 pounds of water per MMcf standard. Curves for both calcium and lithium chloride are shown, although lithium chloride is rarely used because of its cost.

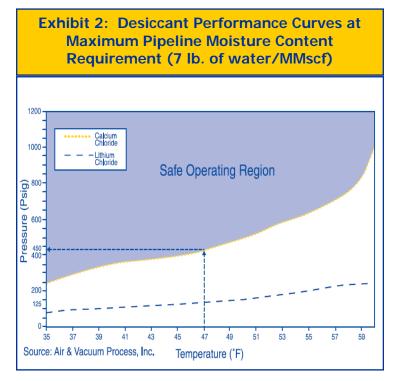

Refilling Desiccants and Draining Brine

As the desiccant tablets absorb moisture from the gas, the depth of the desiccant tablets in the drying bed slowly decreases. Some manufacturers place a "window" (sightglass) on the vessel (see Exhibit 1) at the minimum desiccant level. When the top of the desiccant reaches the sight-glass, the operator needs to refill the desiccant up to the maximum level. Refilling the working bed is a manual operation that involves switching gas flow to another dehydration vessel, shutting valves to isolate the "empty" vessel, venting gas pressure to the atmosphere, opening the top filler hatch, and pouring desiccant pellets into the vessel. This requires the operator to dump one or more 30 to 50 pound bags of salt into the vessel, depending on dehydrator design. Because this procedure needs to be performed more frequently the higher the gas throughput, desiccant dehydrators are usually used when the volume of gas to be dried is 5 MMcfd or less.

The brine in the claim area is sometimes drained manually (desiccant dehydrators typically accumulate from 10 to 50 gallons of brine a week). Draining to an evaporation pond is best done after the vessel is depressurized, while draining to a produced water tank can be done before the vessel is depressurized—taking advantage of the gas pressure to push the brine into the tank. On rare occasions brine may be pumped into a tank truck using a pneumatic "duplex-type" pump.

### **Economic and Environmental Benefits**

Using desiccant dehydrators as alternatives to glycol dehydrators can yield significant economic and environmental benefits, including:

- ★ Reduced capital cost—The capital costs of desiccant dehydrators are low compared to the capital costs of glycol dehydrators. A desiccant dehydrator does not use a circulation pump, pneumatic controls, a gas heater, or a fired reboiler/ regenerator.
- ★ Reduced operation and maintenance cost— Glycol dehydrators burn a significant amount of produced gas for fuel in a gas heater and glycol regenerator. If the brine drain valve is automatic, the only O&M cost for a desiccant dehydrator is for refilling the desiccant bed.
- ★ Minimal methane, VOC, and HAP emissions— Glycol dehydrators continuously vent gas to the atmosphere from pneumatic devices and the TEG regenerator vent. The only gas emissions from desiccant dehydrators occur during desiccant vessel depressurizing for salt refilling, typically one vesselvolume per week. Brine is produced in small quantities and absorbs little hydrocarbon.

#### **Decision Process**

Partners can evaluate potential locations and economics for replacing existing glycol dehydrators with desiccant dehydrators using the following five steps.

#### Step 1: Identify appropriate locations.

Desiccant dehydrators are an economic choice under certain operating conditions. Their applicability is determined primarily by gas throughput and produced gas temperature and pressure. Desiccant dehydrators work best when the volume to be dried is 5 MMcfd or less, and absorb moisture down to pipeline specifications when the wellhead gas temperature is low and the pressure is high.

#### Five Steps for Evaluating a Desiccant Dehydrator:

- Step 1: Identify appropriate locations.
- Step 2: Determine dehydrator capacity.
- Step 3: Estimate the capital and operating costs.
- Step 4: Estimate savings.
- Step 5: Conduct economic analysis.

If the inlet temperature of the gas is too high, desiccants can form hydrates that precipitate from the solution and cause caking and brine drainage problems. While it is possible to cool or compress the produced gas in order to use desiccant dehydrators, these measures increase system complexity and typically are cost prohibitive.

In contrast, glycol dehydrators are a better choice for higher producing well sites and work best for higher temperature gas at any pressure. If the produced gas temperature is too low for the TEG process, however, operators will need to heat the gas prior to entering the dehydrator. Since heating the gas requires more product to be burned as fuel, these situations are likely to be good candidates for desiccant dehydrators. Exhibit 3 shows which gas drying systems work best under various operating conditions.

# Exhibit 3: Optimum Operating Conditions for Dehydration Technologies

	Low Pressure (<100 psig)	High Pressure (>100 psig)		
Low Temperature (<70°F)	Desiccant/Glycol <sup>a</sup>	Desiccant		
High Temperature (>70°F)	Glycol	Glycol/Desiccant <sup>b</sup>		

<sup>a</sup> The gas may need to be heated to use a glycol dehydrator, or the gas may need to be compressed to use a desiccant dehydrator.

<sup>b</sup> The gas may need to be cooled to use a desiccant dehydrator.

#### Step 2: Determine dehydrator capacity.

The first step in estimating the size of a desiccant dehydrator is to determine the inlet and outlet moisture content of the gas. This is required to calculate the quantity of desiccant needed, and from that the size of the vessel. Operators use a natural gas water vapor content graph (example shown in Appendix B), a moisture content table, or a sizing program such as the Hanover Company's Quick Size program, found at <www.hanover-co.com/home/ products/index.html>, to estimate the water content in the gas stream. For this analysis, we will assume the dehydrator is being designed to handle a 1 MMscf/day gas stream at  $47^{\circ}$ F and 450 psig. For this scenario, using any of these methods yields the same results—the natural gas stream contains 21 pounds of water per MMcf.

In order to meet a pipeline moisture specification of 7 pounds per MMcf, calcium chloride desiccant must remove 14 pounds of water

#### Vendor's Rule-of-Thumb

One pound of desiccant removes three pounds of moisture from the gas.

#### **Nelson Price Indexes**

In order to account for inflation in equipment and operating & maintenance costs, Nelson-Farrar Quarterly Cost Indexes (available in the first issue of each quarter in the *Oil and Gas Journal*) are used to update costs in the Lessons Learned documents.

The "Refinery Operation Index" is used to revise operating costs while the "Machinery: Oilfield Itemized Refining Cost Index" is used to update equipment costs.

To use these indexes in the future, simply look up the most current Nelson-Farrar index number, divide by the February 2006 Nelson-Farrar index number, and, finally multiply by the appropriate costs in the Lessons Learned.

per MMcf of gas. For a 1 MMcfd dehydrator, and using a vendor's rule-of-thumb that 1 pound of desiccant removes 3 pounds of water, 4.7 pounds of calcium chloride will be dissolved per day. Exhibit 4 summarizes this calculation.

## Exhibit 4: Determine the Daily Consumption of Desiccant

Where:	
D F	<ul> <li>Daily consumption of desiccant (lb/day)</li> <li>Gas flow rate (MMcf/day)</li> </ul>
	= Inlet water content (Ib/MMcf)
0	= Outlet water content (Ib/MMcf)
В	= Desiccant-to-water ratio (Ib desiccant/Ib water)
Given:	
F	= 1 MMcf/day of production gas at 47°F and 450 psig
1	= 21 lb/MMcf
0	= 7 lb/MMcf (pipeline moisture requirement)
В	= 1 lb desiccant/3 lb water (vendor rule-of-thumb)
Calcula	te:
D	= F * (I-O) * B
	= 1 * (21-7) * 1/3
	= 4.7 lb desiccant/day

The next step is to size the vessel. Vendors supply desiccant dehydrator vessels in standard sizes, usually specified by outside diameter and maximum gas throughput at various operating pressures, as shown in Exhibit 6. The bed dimensions are fixed to achieve equilibrium gas moisture content. This includes a standard size working bed depth: 5 inches for this vendor.

	Exhibit 5: Determine the Size of the Desiccant Dehydrator
Where:	
ID D H T B	<ul> <li>Inside diameter of the desiccant vessel (in)</li> <li>Daily desiccant consumption (lb/day)</li> <li>Working salt bed height (in)</li> <li>Time between refilling (days)</li> <li>Bulk density (lb/ft<sup>3</sup>)</li> </ul>
Given:	
D H T B	<ul> <li>= 4.7 lb/day (Exhibit 4)</li> <li>= 5 in (vendor rule-of-thumb)</li> <li>= 7 days (operator's choice)</li> <li>= 55 lb/ft<sup>3</sup> (vendor's data)</li> </ul>
Calculat	e:
ID	= $12 * \sqrt{\frac{4 * D * T * 12}{H * P * B}}$ = $12 * \sqrt{\frac{4 * 4.7 * 7 * 12}{5 * P * 55}}$ = 16.2 in
	andard vessel size from Exhibit 6: elect next larger size than ID = 20 in

Partners can select the desiccant vessel size from the vendor's table or calculate the size using the equations in Exhibit 5. For the 1 MMcfd dehydrator example above, using Exhibit 5 gives a vessel with a 16.2 inch inside diameter (about 17 inch outside diameter with a 3/8 inch wall thickness). To use Exhibit 6, follow the 450-psig column down to the throughput capacity equal to or greater than what is needed; in this example, 1,344 Mcfd (1.344 MMcfd). Following this row to the left yields an outside diameter of 20 inches.

#### Step 3: Estimate the capital and operating costs.

Capital costs for single vessel desiccant dehydrators suitable for gas production rates from 0.1 to 5 MMcf per day (including the initial fill of desiccant) range between \$3.500 and \$21,000. After determining the necessary vessel size (Step 2), Partners can use Exhibit 6 to determine the capital costs of a desiccant dehydrator. For the example given in Step 2, the capital cost of a 20-inch, single vessel desiccant dehydrator is \$8,048. For a twovessel dehydrator, the cost would be \$16,096.

Installation costs typically range from 50 to 75 percent of the equipment cost. Using an installation factor of 75 percent of the equipment cost, the single vessel desiccant dehydrator described above would cost \$6,036 to install. The two-vessel dehydrator would cost \$12,072 to install.

The operating cost of using a desiccant dehydrator includes the costs of desiccant replacement and brine disposal. Because the desiccant tablets dissolve as they remove moisture from the gas, the working salt bed will need to be replenished periodically. The resulting brine also requires removal and treatment or disposal.

Exhibit 7 shows the operating cost calculations for the 1 MMcfd dehydrator example. Depending on the vendor, the

Outside Diameter (inches)	Cost (\$) <sup>a,b</sup>	100 psig	200 psig	300 psig	350 psig	400 psig	450 psig	500 psig
10	3,529	95	177	260	301	342	383	424
12	4,674	132	247	362	419	476	533	590
16	7,262	214	400	587	680	773	866	959
20	8,048	311	620	909	1,054	1,199	1,344	1,489
24	11,014	481	900	1,319	1,528	1,738	1,948	2,158
30	15,911	760	1,422	2,085	2,416	2,747	3,078	3,409
36	21,092	1,196	2,230	3,270	3,789	4,308	4,827	5,346

### Exhibit 6: Cost and Maximum Throughput Capacity (Mcfd) of Desiccant Dehydrators

re ratings up to ooo psig, inclu <sup>b</sup> Dehydrator cost includes all appurtenances: vessel, support structure, valves, and piping Source: Van Air, updated to 2006 equipment costs.

cost of calcium chloride can range from \$0.80 to \$1.49 per pound. Using \$1.49 per pound for the cost of calcium chloride, the total cost for refilling 4.7 pounds per day (from Exhibit 4) is \$2,556 per year. In the example given in Exhibit 4, very little brine is produced removing moisture from gas to achieve the desired pipeline moisture specification (i.e., 7 pounds per MMcf): 4.7 pounds per day of salt plus the 14 pounds of water per day removed from the gas, or 18.7 pounds of brine per day—a little over 2 gallons per day.

## Exhibit 7: Determine the Operating Cost of a Desiccant Dehydrator

Where:	
TO CD CB I O F P D S BD LC	<ul> <li>Total operating cost (\$/year)</li> <li>Cost of desiccant (\$/year)</li> <li>Cost of brine disposal (\$/year)</li> <li>Inlet water content (Ib/MMcf)</li> <li>Outlet water content (Ib/MMcf)</li> <li>Gas flow rate (MMcf/day)</li> <li>Price of the desiccant (\$/Ib)</li> <li>Daily desiccant consumption (Ib/day)</li> <li>Density of CaCl<sub>2</sub> brine (Ib/bbl)</li> <li>Cost of brine disposal (\$/bbl)</li> <li>Labor cost (\$)</li> </ul>
LT LR Given:	<ul> <li>Labor time for operator to refill with desiccant (hr)</li> <li>Labor rate for operator (\$/hr)</li> </ul>
F P D S BD LT LR	<ul> <li>= 1 MMcf/day of production gas at 47°F and 450 psig</li> <li>= \$1.49/lb of calcium chloride (vendor data)</li> <li>= 4.7 lb desiccant/day (Exhibit 4)</li> <li>= 490 lb/bbl</li> <li>= \$1.40/bbl<sup>a</sup></li> <li>= 1 hr/week</li> <li>= \$40/hr</li> </ul>
Calculat	e:

#### Calculate:

CD	= D*P*365 day/yr = 4.7*1.49*365
	= \$2,556/yr
СВ	$=\frac{[((I-O)*F)+D]*BD*365  days/ yr}{S}$
	$= \frac{[((21-7)*1)+4.7]*1.4*365}{490}$
	= \$20/yr
LC	= LT*LR*52 weeks/yr = 1*40*52
	= \$2,080/yr
то	= CD + CB + LC
	= \$2,556+\$20+\$2,080 = \$4,656/yr

<sup>a</sup> GRI Atlas of Gas-Related Produced Water for 1990, May 1995, updated to 2006 costs.

#### Step 4: Determine economic replacement threshold.

Replacing a glycol dehydrator with a desiccant dehydrator significantly saves gas and reduces operation and maintenance costs.

#### **Determining Net Gas Savings**

The amount of gas saved can be determined by comparing the gas emissions and usage for the existing glycol dehydrator to the gas vented from a desiccant dehydrator. Partners can determine the gas savings by determining the following five factors.

- ★ Estimate the gas vented from glycol dehydrator-The amount of gas vented from the glycol regenerator/reboiler is equal to the gas entrained in the TEG. To determine this, Partners will need to know the gas flow rate, the inlet and outlet water content, the glycol-to-water ratio, the percent over-circulation, and the methane Exhibit 8 demonstrates this entrainment rate. calculation for the 1 MMcfd dehydrator example. In this example, an energy exchange pump without a flash tank separator is assumed. Using rules-of thumb from EPA's Lessons Learned: Optimize Glycol Circulation and Install Flash Tank Separators in Glycol Dehydrators, methane gas emissions of 69 Mcf per year is calculated.
- ★ Estimate the gas vented from pneumatic controllers—Pneumatic controllers are commonly used to monitor and regulate gas and liquid flows, temperature, and pressure in glycol dehydrator units. Specifically, the controllers regulate gas and liquid flows in dehydrators and separators, temperature in dehydrator regenerators, and pressure in flash tanks (when in use). In this example, the glycol dehydrator unit with a gas heater is assumed to have four bleeding pneumatic controllers—level controllers on the contactor and reboiler and temperature

#### Determine the Net Gas Savings:

Add Savings from eliminating:

- Gas vented from glycol dehydrator.
- Gas vented from pneumatic controllers.
- Gas burned as fuel in glycol reboiler.
- Gas burned as fuel in a gas heater.

#### Subtract:

• Gas vented from desiccant dehydrator.

controllers on the reboiler and gas heater. It does not have a flash tank separator. Pneumatic devices are assumed to be a typical mix of high bleed and low bleed (i.e., they bleed in excess of 50 Mcf of gas per year during operation). Based on

	Exhibit 8: Gas Vented from the Glycol Dehydrator
Where:	
GV F W R OC G	<ul> <li>Amount of gas vented annually (Mcf/yr)</li> <li>Gas flow rate (MMcf/day)</li> <li>Inlet-outlet water content (Ib/MMcf)</li> <li>Glycol-to-water ratio (gal/lb)<sup>a</sup></li> <li>Percent over-circulation</li> <li>Methane entrainment rate (ft<sup>3</sup>/gal)<sup>a</sup></li> </ul>
Given:	
F W R G OC	<ul> <li>= 1 MMcfd of gas at 47°F and 450 psig</li> <li>= 21 - 7 = 14 lb water/MMcf (Exhibit 4)</li> <li>= 3 gal/lb (rule-of-thumb)<sup>a</sup></li> <li>= 3 ft<sup>3</sup>/gal for energy exchange pumps (rule-of-thumb)<sup>a</sup></li> <li>= 150%</li> </ul>
Calculat	e:
GV	$= \frac{(F*W*R*OC*G*365 days/yr)}{1,000cf/Mcf}$ = $\frac{(1*14*3*1.5*3*365)}{1,000}$ = 69 Mcf/yr
<sup>a</sup> From EPA's Dehydrators.	s Lessons Learned: Optimize Glycol Circulation and Install Flash Tank Separators in Glycol

the GRI/EPA study, *Methane Emissions From the Natural Gas Industry, Volume 12–Pneumatic Devices,* the annual emission factor for an average bleed pneumatic device is estimated to be 126 Mcf per year. Therefore, the four pneumatic devices will contribute 504 Mcf of the methane emissions annually. Exhibit 9 summarizes this example.

#### Exhibit 9: Gas Vented from Pneumatic Controllers

Where:	
GB EF	<ul> <li>Gas bleed (Mcf/yr)</li> <li>Emission factor (Mcf natural gas bleed/pneumatic device per year)<sup>a</sup></li> </ul>
PD	= Number of pneumatic devices
Given:	
EF	= 126 Mcf/device/yr
PD	= 4 pneumatic devices/glycol dehydrators
Calculate	e:
GB	= EF * PD
	= 126 * 4
	= 504 Mcf/yr
a GRI/EPA st	udy, Methane Emissions from the Natural Gas Industry, Volume 12.

★ Estimate the gas burned for fuel in glycol reboiler—The glycol dehydrator uses natural gas in

the reboiler/regenerator to boil-off water from the rich glycol. Assuming that the heat duty of the reboiler is 1,124 Btu per gallon of TEG, the gas used by the reboiler is 17 Mcf per year. Exhibit 10 summarizes this calculation.

	Exhibit 10: Gas Burned for Fuel
	in Glycol Reboiler
Where	:
FGR	= Fuel gas for reboiler (Mcf/yr)
F	= Gas flow rate (MMcfd)
W	= Inlet-outlet water content (lb/MMcf)
Qr	= Heat duty of reboiler (Btu/gal TEG) <sup>a</sup>
Ηv	= Heating value of natural gas (Btu/scf) <sup>b</sup>
R	= Glycol-to-water ratio (gal TEG/lb water) <sup>c</sup>
Given:	
F	= 1 MMcfd
W	= 21 - 7 = 14 lb water/MMcf
Qr	= 1,124 Btu/gal TEG
Ηv	= 1,027 Btu/scf
R	= 3 gal TEG/Ib water removed
Calcula	ate:
	(F * W * Qr * R * 365 days / yr)
FGR	$= \frac{1}{Hv * 1,000 \ cf \ / Mcf}$
	= (1 * 14 * 1,124 * 3 * 365)
	1,027 *1,000

<sup>a</sup> Based on calculation in *Engineering Data Book, Volume II*, 11th edition, Gas Processors Supply Association, 1998, Section 20-Dehydration.

<sup>b</sup> Energy Information Administration (EIA), Monthly Engineering Review, Table A4.

c From EPA's Lessons Learned: Optimize Glycol Circulation and Install Flash Tank Separators in Glycol Dehydrators.

- ★ Estimate the gas burned for fuel in a gas heater—TEG does not perform well on low temperature gas. As a result, the gas is typically heated prior to entering the dehydrator unit. Natural gas is used to fuel the gas heater. The amount of fuel gas used to heat 1 MMcfd of produced gas from 47°F to (assumed) 90°F is 483 Mcf per year. Exhibit 11 shows this calculation.
- ★ Estimate the gas loss from desiccant dehydrator—The gas loss from a desiccant dehydrator is determined by calculating the amount of gas vented from the vessel every time it is depressurized for the refilling process. To determine the volume of gas vented, Partners will need to determine the volume of the dehydrator vessel and what percentage of this volume is occupied by gas. The 20-inch OD vessel in Exhibit 6 would have an

	Exhibit 11: Amount of Fuel Gas Used to Heat the Gas
Where: FGH Hv Cv D DT F E	<ul> <li>= Fuel gas used in heater (Mcf/yr)</li> <li>= Heating value of natural gas (Btu/cf)</li> <li>= Specific heat of natural gas (Btu/lb°F)</li> <li>= Density of natural gas (lb/cf)</li> <li>= (T<sub>2</sub> - T<sub>1</sub>) change in temperature (°F)</li> <li>= Flow rate (MMcf/d)</li> <li>= Efficiency</li> </ul>
Given:	
Hv Cv D DT F E	= 1,027 Btu/cf = 0.441 Btu/lb°F = 0.0502 lb/cf = 43°F (90 - 47)°F = 1 MMcf/d = 70%
Calculat	e:
FGH	$= \frac{(F * D * Cv * DT * 365 days/yr * 1,000Mcf/MMcf)}{(Hv * E)}$
	$= \frac{(1*0.0502*0.441*43*365*1,000)}{(1,027*0.7)}$
	= 483 Mcf/yr

approximately 19.25-inch ID (assuming a 3/8 inch wall thickness). The vessel has an overall length of 76.75 inches with 45 percent of its volume filled with gas. Using Boyle's Law, the amount of gas vented to the atmosphere during depressurizing of the vessel is 10 Mcf per year. Exhibit 12 summarizes this calculation.

Estimate the total gas savings—The total gas \* savings is the total avoided emissions and gas use of the glycol dehydrator minus the gas lost from venting of the desiccant dehydrator when replacing the desiccant. In this example, total gas savings are 1,063 Mcf per year. Using a gas price of \$7.00 per Mcf, the gas value saved is \$7,441 per year. Nonassociated natural gas contains 78.8 percent Therefore, the total methane emission methane. savings is 78.8 percent of the difference between the gas emitted by the glycol dehydrator and its pneumatic controllers (Exhibits 8 and 9 respectively), and the desiccant dehydrator (Exhibit 12); in this case, 507 Mcf per year. Exhibit 13 summarizes this example.

# Exhibit 12: Gas Lost from the Desiccant Dehydrator

Where:	
GLD H D P <sub>1</sub> P <sub>2</sub> P %G T	<ul> <li>Gas loss from desiccant dehydrator (scf/yr)</li> <li>Height of the dehydrator vessel (ft)</li> <li>Inside diameter of the vessel (ft)</li> <li>Atmospheric pressure (psia)</li> <li>Pressure of the gas (psig)</li> <li>pi</li> <li>Percent of packed vessel volume that is gas</li> <li>Time between refilling (days)</li> </ul>
Given:	
Н	= 76.75 in (6.40 ft) <sup>a</sup>
D	= 19.25 in (1.6 ft)
P <sub>1</sub> P <sub>2</sub>	= 14.7 psia = 450 psig + 14.7 (464.7 psig)
P	= 3.14
%G	= 45% (vendor's rule-of-thumb) <sup>a</sup>
Т	= 7 days
Calculat	e:
01.5	$(H * D^{2} * P * P_{2} * \% G * 365 \ days \ / \ yr)$
GLD	= $(4 * P_1 * T * 1,000 \ cf \ / Mcf)$
	$= (6.4 * 1.6^{2} * 3.14 * 464.7 * 0.45 * 365)$
	(4 * 14.7 * 7 * 1,000)
	= 10 Mcf/yr

Based on product data provided by Van Air.

#### Exhibit 13: Total Gas Savings Calculate: TGS = Total Gas Savings (Mcf/yr) = Exhibit 8 + Exhibit 9 + Exhibit 10 + Exhibit 11 - Exhibit 12 = 69 + 504 + 17 + 483 - 10 = 1,063 Mcf/yr = 1,063 Mcf/yr \* \$7/Mcf Savings = \$7,441/yr **Methane Emissions Reduction** TMER = Total methane emissions reduction TMER = 78.8% \* (Exhibit 8 + Exhibit 9 - Exhibit 12) = 0.788 \* (69 + 504 - 10)= 444 Mcf/yr

#### **Determining Operations and Maintenance Savings**

Other savings include the difference between the operating and maintenance cost (labor cost) of a desiccant dehydrator and a glycol dehydrator.

The operation cost of a desiccant dehydrator includes the

<b>Methane</b>	Content of	f Natural Gas
----------------	------------	---------------

The average methane content of natural gas varies by natural gas industry sector. The Natural Gas STAR Program assumes the following methane content of natural gas when estimating methane savings for Partner Reported Opportunities.

Production	79 %
Processing	87 %
Transmission and Distribution	94 %

refill cost of the desiccant, disposal of the brine, and labor costs. Since a desiccant dehydrator has no moving parts and does not require power to operate, maintenance costs are negligible. The refill and brine disposal costs previously calculated in Exhibit 7 are \$2,556 and \$20 per year, respectively. Labor costs assume one hour per week for the operator to refill the desiccant dehydrator. At \$40 per hour, this would cost about \$2,080 per year.

Operating cost for a glycol dehydrator includes topping-up the glycol sump to maintain glycol levels. Maintenance and labor include inspecting and cleaning the mechanical systems, periodically repairing the circulation pump and pneumatic controls, and annually cleaning the fire-tubes of the reboiler and gas heater. Glycol costs \$5.57 per gallon, and a typical make-up rate is 0.1 gallons per MMcf of gas processed. For this example, this works out to about 37 gallons of glycol per year, or \$206 per year. Labor costs assume operators spend an average of two hours per week maintaining and repairing the unit. At \$40 per hour this amounts to about \$4,160 per year. Spare parts are estimated at half the labor cost, or \$2,080 per year. Based on this, total operation, maintenance, and labor costs for our example glycol dehydrator system is \$6,446 per year.

#### Step 5: Conduct economic analysis.

The final step is to compare the implementation and annual operating and maintenance costs of each option and the value of gas saved or used/lost by each unit. Exhibit 14 provides a comparison of the implementation and operating and maintenance costs of a desiccant dehydrator and a glycol dehydrator (dehydrating 1 MMcfd natural gas at 450 psig pressure and 47°F temperature). Exhibit 15 compares the amount and the value of gas used and lost by each system.

Exhibit 16 shows the savings a Natural Gas STAR Partner could expect over a 5-year period by replacing an existing glycol dehydrator of 1 MMcfd at 450 psig and  $47^{\circ}$ F gas with a desiccant dehydrator.

## Exhibit 14: Cost Comparison of Desiccant Dehydrator and Glycol Dehydrator

#### 1 MMcfd natural gas at operating 450 psig and 47°F Desiccant Glycol Type of Costs and Savings (\$/yr) (\$/yr) **Implementation Costs** Capital Costs 16.097 Desiccant<sup>a</sup> (includes the initial fill) 24,764 Glycol 12,073 18,573 Other costs (installation and engineering)<sup>b</sup> **Total Implementation Costs:** 28,169 43,337 Annual Operating and Maintenance Costs Desiccant 2,556 Cost of desiccant refill<sup>c</sup> (\$1.20/lb) 20 Cost of brine disposal<sup>c</sup> 2,080 Labor cost<sup>d</sup> Glycol Cost of glycol refill<sup>d</sup> (\$5.57/gal) 206 6,240 Material and labor cost<sup>d</sup> 4,656 Total Annual Operation and Maintenance Costs: 6,446 <sup>a</sup> Based on two desiccant vessels used alternatively. See Exhibit 5. Installation costs assumed at 75% of the equipment cost c Values are from Exhibit 7.

d See Step 4, Estimate Savings.

# Exhibit 15: Gas Use/Loss and Value Comparison

1 MMcfd natural gas at operati	ng 450 psi	g and 47	° <b>F</b>	
Time of Loss (llos	Desic	cant	Gly	col
Type of Loss/Use	Mcf/yr	\$/yr <sup>a</sup>	Mcf/yr	\$/yrª
Gas Use				
Fuel (Exhibits 10 and 11)	—	—	500	3,500
Gas Loss				
Pneumatic devices (Exhibit 9)	-	_	504	3,528
Vents (Exhibits 8 and 12)	10	70	69	483
Total:	10	70	1,073	7,511
Methane Emissions <sup>b</sup> :	8	_	452	—
<sup>a</sup> Gas price based on \$7/Mcf. <sup>b</sup> Values are from Exhibit 12 and Exhibit 13.		<u>.</u>	<u>.</u>	<u>.</u>

Exhib	it 16: Economi with a Two-	ics of Replacin Vessel Desicca	<b>·</b>		stem	
Types of Costs and Savings <sup>a</sup>	Year 0 (\$/yr)	Year 1 (\$/yr)	Year 2 (\$/yr)	Year 3 (\$/yr)	Year 4 (\$/yr)	Year 5 (\$/yr)
Capital costs	(28,169)					
Avoided O&M costs		6,446	6,446	6,446	6,446	6,446
O&M costs - Desiccant (\$/yr)		(4,656)	(4,656)	(4,656)	(4,656)	(4,656)
Value of gas saved		7,441	7,441	7,441	7,441	7,441
Surplus equipment value	12,382 <sup>b</sup>					
Total (\$)	(15,787)	9,232	9,232	9,232	9,232	9,232

NPV (Net Present Value)<sup>c</sup> = \$19,208IRR (Internal Rate of Return)<sup>d</sup> = 51%

Payback Period (months) = 21

- <sup>b</sup> Based on a 50% of the capital cost of glycol dehydrator.
- <sup>c</sup> The NPV is calculated based on 10% discount over 5 years.

When considering replacing glycol dehydrators with desiccant dehydrators, natural gas price may influence the decision making process. Exhibit 17 shows an economic analysis of installing a 1 MMcfd desiccant dehydrator that operates at 450 psig and  $47^{\circ}$  F at different natural gas prices.

Ex		: Gas P nomic /			
	\$3/Mcf	\$5/Mcf	\$7/Mcf	\$8/Mcf	\$10/Mcf
Value of Gas Saved	\$3,189	\$5,315	\$7,441	\$8,504	\$10,630
Payback Period (months)	39	27	21	19	16
Internal Rate of Return (IRR)	17%	35%	51%	59%	74%
Net Present Value ( <i>i</i> =10%)	\$3,089	\$11,148	\$19,208	\$23,237	\$31,296

#### **Lessons Learned**

Desiccant dehydrators can cost-effectively reduce methane emissions for gas dehydration. Partner experience offers the following lessons learned:

 $\star$  Desiccant dehydrators can provide significant

economic benefits, such as increased operating efficiency and decreased capital and maintenance costs for low flow rate gas at higher pressures and lower temperature conditions.

- ★ Make-up (replacement) cost of the desiccant is slightly higher than the glycol because the desiccants dissolve in water and must be replaced regularly, while the glycol is recirculated.
- ★ Desiccant dehydrators are an effective method for eliminating methane, VOC, and HAP emissions, resulting in both economic and environmental benefits.
- ★ Include methane emissions reductions attributable to replacing glycol dehydrators with desiccant dehydrators in Natural Gas STAR Program annual reports.

### References

- Acor, Lori G. and David Mirdadian. *Benefits of Using Deliquescing Desiccants for Gas Dehydration.* Society of Petroleum Engineers (SPE82138), 2003.
- Bowman, Bob. *Benefits of Using Deliquescing Desiccants for Gas Dehydration*. Society of Petroleum Engineers (SPE 60170), 2000.

<sup>&</sup>lt;sup>a</sup> All cost values are obtained from Exhibits 14 and 15. The gas price is assumed to be \$7/Mcf.

<sup>&</sup>lt;sup>d</sup> The IRR is calculated based on 5 years.


- Dow Chemical Company, product literature. *Gas Dehydration with PELADOW DG Calcium Chloride.*
- Energy Information Administration. *Monthly Energy Review*, 2002, Table A4.
- Eskrigge, Charles. Air and Vacuum Process Inc. (Van Air), personal contact.
- Gas Processors Supply Association. *Engineering Data Book*, Volume II, 11th edition, 1998, Section 20-Dehydration.
- Gas Research Institute. *Atlas of Gas-Related Produced Water for 1990.* (GRI-95/0016, May 1995).
- Gas Research Institute. *Methane Emissions From the Natural Gas Industry*, 1996, Volume 12 (GRI-94/0257.29). June 1996.
- Murray, Curt. *Practical Methods of Drying Natural Gas*. Pride of the Hills MFG., Inc.
- Murray, Curt. Pride of the Hills Mfg., Inc., personal contact.
- Smith, Reid. BP, personal contact.
- The Hanover Compressor Company. personal contact.
- Tingley, Kevin. U.S. EPA Natural Gas STAR Program, personal contact.
- U.S. Environmental Protection Agency. *Lessons Learned: Optimize Glycol Circulation and Install Flash Tank Separators in Glycol Dehydrators* (EPA430-B-03-013, May 2003).
- U.S. Environmental Protection Agency. *Lessons Learned: Replacing Gas— Assisted Glycol Pumps with Electric Pumps* (EPA430-B-03-014, May 2003).
- Vavro, Matthew E. *Minimizing Natural Gas Dehydration Costs with Proper Selection of Dry Bed Desiccants and New Dryer Technology.* Society of Petroleum Engineers (SPE37348), 1996.

Zavadil, Duane. Williams Production, personal contact.

# Appendix A

					Туре	e Calci	um Ch	loride	e Delio	quesce	ent De	siccant	Tablet	S				
	10 PSIG	25 PSIG	50 PSIG	75 PSIG	100 PSIG	125 PSIG	150 PSIG	175 PSIG	200 PSIG	225 PSIG	250 PSIG	275 PSIG	300 PSIG	350 PSIG	400 PSIG	500 PSIG	750 PSIG	100 PSI0
80ºF	344	219	13	98	77	64	55	48	43	39	35	33	30	27	23.6	19.7	14.3	11.
75ºF	292	186	113	83	65	54	46	41	36	33	30	28	26	22.5	20.1	16.8	12.2	9.9
70ºF	246	157	96	70	55	46	39	43	31	27	25	23.4	21.7	19.1	17.1	14.3	10.4	8.
65ºF	207	132	81	59	47	39	33	29	26	23.5	21.4	19.8	18.4	16.2	14.5	12.1	8.9	7.3
60ºF	174	111	68	50	39	33	29	24.5	21.9	19.8	18.1	16.8	15.5	13.7	12.3	10.3	7.6	6.2
58ºF	162	103	63	46	36	31	26	22.8	20.3	18.4	16.8	15.6	14.4	12.9	11.4	9.6	7	5.8
56ºF	150	96	59	43	34	29	24.1	21.2	18.9	17.1	15.7	14.5	13.4	11.8	10.6	8.9	6.6	5.4
54ºF	140	89	55	40	32	26	22.5	19.8	17.6	16	14.6	13.5	12.6	11.1	9.9	8.3	6.2	5.1
52ºF	130	83	51	37	29	24.5	21	18.4	16.4	14.9	14.4	12.6	11.7	10.3	9.3	7.8	5.8	4.7
50ºF	121	77	47	35	27	22.8	19.5	17.1	15.3	13.9	12.7	11.7	10.9	9.6	8.6	7.2	5.4	4.4
	400	64	39	29	22.7	18.9	16.2	14.3	12.7	11.5	10.6	9.8	9.1	8	7.2	6.1	4.5	3.1
45ºF	100	04	35	29														
	83	53	32	23	18.8	15.6	13.4	11.8	10.5	9.6	8.8	8.1	7.5	6.7	6	5	3.8	3.1
40ºF					18.8 15.5	13	11.1	9.8	8.7	7.9	7.2	6.7	7.5 6.2 Tablet	5.5	6 5	5 4.2	3.8 3.1	
45ºF 40ºF 35ºF	83 68 <b>10</b>	53 44 25	32 27 <b>50</b>	24 19.6 <b>75</b>	18.8 15.5 <b>Typ</b> 100	13 e Lithio 125	11.1 um Ch	9.8 Iloride 0 17	8.7 2 Delic	7.9 quesce	7.2 ent Des	6.7 siccant	6.2 Tablet	5.5 5 350	5 400	4.2 500	3.1 750	2.0
40ºF 35ºF	83 68 10 PSIG	53 44 25 PSIG	32 27 50 PSIG	24 19.6 75 PSIG	18.8 15.5 <b>Typ</b> 95IG	13 e Lithin 125 PSIG	11.1 um Ch 15 PSI	9.8 Iloride 0 17 G PSI	8.7 <b>Delic</b> 5 2 6 Ps	7.9 quesce 00 2 sig Ps	7.2 ent Des 225 SIG P	6.7 siccant 250 2 SIG PS	6.2 Tablet 75 300 PSIG	5.5 350 PSIG	5 400 PSIG	4.2 500 PSIG	3.1 750 PSIG	2.6 1000 PSIG
40ºF 35ºF	83 68 10 PSIG 128	53 44 25 PSIG 81	32 27 50 PSIG 50	24 19.6 <b>75</b> <b>PSIG</b> 36	18.8 15.5 <b>Typ</b> 100 PSIG 29	13 e Lithiu 125 PSIG 23.7	11.1 um Ch 15 PSI 7 20.	9.8 Iloride 0 17 G PSI 2 17	8.7 <b>Delic</b> 5 2 6 Ps .8 1!	7.9 quesce sig Ps 5.8 1	7.2 ent Des 225 SIG P 4.3	6.7 siccant 250 2 SIG PS 13 1	6.2 <b>Tablet</b> 75 300 816 PS10 12 11.1	5.5 350 PSIG 9.8	5 400 PSIG 8.7	4.2 500 PSIG 7.3	3.1 750 PSIG 5.3	2.6 100 PSIC 4.3
40°F 35°F 80°F 75°F	83 68 <b>10</b> <b>PSIG</b> 128 108	53 44 25 PSIG 81 69	32 27 50 PSIG 50 42	24 19.6 <b>75</b> <b>PSIG</b> 36 31	18.8 15.5 <b>Typ</b> 100 PSIG 29 24.2	13 e Lithio 23.7 20	11.1 um Ch 7 20. 17.	9.8	8.7 2 Delic 5 2 6 PS .8 11 .1 13	7.9 quesce 316 Ps 5.8 1 3.4 1	7.2 ent Des 225 51G P 4.3 2.1 1	6.7 siccant 250 2 SIG PS 13 1 1.1 10	6.2 <b>Tablet</b> 75 816 PS16 12 11.1 0.2 9.5	5.5 350 PSIG 9.8 8.3	5 400 PSIG 8.7 7.4	4.2 500 PSIG 7.3 6.2	3.1 750 PSIG 5.3 4.5	2.6 100 PSIC 4.3 3.7
40°F 35°F 80°F 75°F 70°F	83 68 10 PSIG 128 108 91	53 44 25 PSIG 81 69 59	32 27 <b>50</b> <b>PSIG</b> 50 42 36	24 19.6 <b>75</b> <b>PSIG</b> 36 31 26	18.8           15.5           Type           100           PSIG           29           24.2           20.4	13 e Lithiu 23.7 20 17	11.1 um Ch i PSIe 7 20. 17. 14.	9.8	8.7           e Delic           5         2           6         Ps           8         11           11         12           .7         11	7.9       QUESCE       00     2       610     P3       5.8     1       3.4     1       1.3     1	7.2 225 2 51G P 4.3 2.1 1 0.3	6.7 siccant sig P: 13 1 1.1 1 9.4 8	6.2           Tablet           75         300           800         Psice           12         11.1           0.2         9.5           8.7         8	5.5 <b>350</b> <b>PSIG</b> 9.8 8.3 7.1	5 <b>400</b> <b>PSIG</b> 8.7 7.4 6.3	4.2 500 PSIG 7.3 6.2 5.3	3.1           750           PSIG           5.3           4.5           3.8	2.6 100 PSIC 4.3 3.7 3.1
40°F 35°F 80°F 75°F 70°F 65°F	83 68 10 PSIG 128 108 91 77	53 44 <b>25</b> <b>PSIG</b> 81 69 59 49	32 27 50 PSIG 50 42 36 30	24 19.6 <b>75</b> <b>PSIG</b> 36 31 26 21.9	18.8           15.5           Type           100           PSIG           29           24.2           20.4           17.2	13 E Lithiu 23.7 20 17 14.3	11.1 um Ch 5 6 7 20. 17. 14. 3 12.	9.8 <b>Iloride</b> <b>0 17</b> <b>G 75</b> <b>1</b> <b>2 1</b> <b>5 1</b> <b>2 1</b> <b>1</b> <b>1</b> <b>1</b> <b>1</b> <b>1</b> <b>1</b> <b>1</b>	8.7 2 Delic 5 2 6 PS 8 11 11 11 7 11 8 9	7.9       quescent       00     2       01     2       02     93       03     1       1.3     1       0.6     8	7.2           ent Des           225         2           SSIG         P           4.3         2.1         1           0.3         9           3.7         9	6.7 siccant sig PS 13 1 1.1 1 9.4 8 7.9 7	6.2           Tablet           75         300           PSIG           12         11.1           0.2         9.5           3.7         8           3.3         6.8	5.5 350 PSIG 9.8 8.3 7.1 6	5 400 PSIG 8.7 7.4 6.3 5.4	4.2 500 PSIG 7.3 6.2 5.3 4.5	3.1           750           PSIG           5.3           4.5           3.8           3.3	2.6 1000 PSIC 4.3 3.7 3.1 2.7
40°F 35°F 80°F 75°F 70°F 65°F 60°F	83 68 10 PSIG 128 108 91 77 65	53 44 25 PSIG 81 69 59 49 41	32 27 50 PSIG 50 42 36 30 25	24 19.6 <b>75</b> <b>PSIG</b> 36 31 26 21.9 18.4	18.8           15.5           Type           29           24.2           20.4           17.2           14.5	13 E Lithin 23.7 20 17 14.3 12.1	11.1 um Ch 5 5 7 200. 17. 14. 3 12. 10.	9.8 Iloride 0 17 G 217 2 17 2 15 5 12 2 10 3 9.	8.7 <b>Delic</b> <b>5</b> <b>2</b> <b>9</b> <b>1</b> <b>1</b> <b>1</b> <b>1</b> <b>1</b> <b>1</b> <b>1</b> <b>1</b>	7.9       quesce       00     2       516     P       5.8     1       3.4     1       1.3     1       .6     8       .1     7	7.2 ent Des sig P 4.3 2.1 1 0.3 3.7 7.4	6.7 <b>Siccant</b> <b>250 2</b> <b>51G P</b> <b>13</b> 1 1.1 1 9.4 8 7.9 7 6.7 6	6.2           Tablet           75         300           Sig         Psic           12         11.1           0.2         9.5           8.7         8           .3         6.8           .2         5.7	5.5 350 PSIG 9.8 8.3 7.1 6 5	5 <b>400</b> <b>PSIG</b> 8.7 7.4 6.3 5.4 4.5	4.2 500 PSIG 7.3 6.2 5.3 4.5 3.8	3.1           750           PSIG           5.3           4.5           3.8           3.3           2.8	2.6 100 PSIC 4.3 3.7 3.1 2.7 2.3
40°F 35°F 80°F 75°F 75°F 65°F 60°F 58°F	83 68 10 PSIG 128 108 91 77 65 60	53 44 25 PSIG 81 69 59 49 41 38	32 27 50 PSIG 50 42 36 30 25 23.4	24 19.6 <b>75</b> <b>PSIG</b> 36 31 26 21.9 18.4 17.1	18.8           15.5           Type           100           PSIG           29           24.2           20.4           17.2           14.5           13.5	13           E Lithin           125           PSIG           23.7           20           17           14.3           12.1           11.2	11.1 um Ch 5 7 20. 17. 14. 3 12. 10. 2 9,6	9.8 Iloride 0 17 G PSI 2 17 2 15 5 12 2 10 3 9. 6 8.	8.7           E Delic           5         2           6         Ps           8         11           1.1         13           .7         11           .8         9           1         8           4         7	7.9       QUESCE       600     2       5.8     1       3.4     1       1.3     1       6.6     8       3.1     7       5.5     6	7.2       ent Des       225     2       SIG     P       4.3     2.1       1     1       0.3     3.7       7.4     5.8	6.7 iiccant 250 2 516 P 13 1 1.1 1 9.4 8 7.9 7 5.7 6 5.2 5	6.2           Tablet           75         300           516         Psic           12         11.1           0.2         9.5           3.7         8           .3         6.8           .2         5.7           .7         5.3	5.5 350 PSIG 9.8 8.3 7.1 6 5 4.7	5 <b>400</b> <b>PSIG</b> 8.7 7.4 6.3 5.4 4.5 4.2	4.2 500 PSIG 7.3 6.2 5.3 4.5 3.8 3.5	3.1           750           PSIG           5.3           4.5           3.8           3.3           2.8           2.6	2.0 100 PSIC 4.3 3.7 3.1 2.7 2.3 2.1
40°F 35°F 80°F 75°F 75°F 65°F 60°F 58°F 58°F	83 68 10 PSIG 128 108 91 77 65 60 56	53 44 25 PSIG 81 69 59 49 41 38 37	32 27 50 PSIG 50 42 36 30 25 23.4 21.7	24 19.6 <b>75</b> <b>PSIG</b> 36 31 26 21.9 18.4 17.1 15.9	18.8           15.5           Type           100           PSIG           29           24.2           20.4           17.2           14.5           13.5           12.5	13 E Lithin 23.7 20 17 14.3 12.1 11.2 10.5	11.1 <b>um Ch</b> <b>5</b> <b>7</b> 20. 17. 14. 3 12. 10. 2 9.6 8.5	9.8 <b>Iloride</b> <b>0 17</b> <b>G PSI</b> 2 17 2 15 5 12 2 10 3 9. 6 8. 9 7.	8.7           2         2           5         2           6         PS           8         11           11         11:           .7         11:           .8         9           1         8           4         7           8         4	7.9       QUESCE       00     2       3.4     1       1.3     1       1.3     1       2.6     8       3.7     6       7     6	7.2       ent Des       225     2       SIG     P       4.3     2.1     1       0.3     3       3.7     7       7.4     5.8       5.3     3	6.7 siccant sig 2 sig 3 sig 2 sig 3 sig 3 si	6.2           Tablet           75         300           75         900           80         9.50           8.7         8           8.3         6.8           9.7         5.37           8         3.3         6.8           9.7         5.33           9.4         5	5.5 350 PSIG 9.8 8.3 7.1 6 5 4.7 4.4	5 400 PSIG 8.7 7.4 6.3 5.4 4.5 4.2 3.9	4.2 500 PSIG 7.3 6.2 5.3 4.5 3.8 3.5 3.3	3.1       750       PSIG       5.3       4.5       3.8       3.3       2.8       2.6       2.4	2.0 100 PSIC 4.3 3.7 3.1 2.7 2.3 2.1 2
40ºF 35ºF 80ºF 75ºF 65ºF 60ºF 58ºF 56ºF 54ºF	83 68 10 PSIG 128 108 91 77 65 60 56 52	53 44 <b>25</b> <b>PSIG</b> 81 69 59 49 41 38 37 33	32 27 50 PSIG 50 42 36 30 25 23.4 21.7 20.3	24 19.6 <b>75</b> <b>PSIG</b> 36 31 26 21.9 18.4 17.1 15.9 14.8	18.8           15.5           Type           100           PSIG           29           24.2           20.4           17.2           14.5           13.5           12.5           11.7	13           E Lithin           23.7           20           17           14.3           12.1           11.2           9.7	11.1           um Ch           15;           PSI           7         20.           17.           14.           3         12.           4         10.           2         9.6           8.5         8.5	9.8 <b>Iloride</b> <b>0 17</b> <b>G 75</b> <b>1</b> <b>2 17</b> <b>2 15</b> <b>5 12</b> <b>2 10</b> <b>3 9</b> . <b>6 8</b> . <b>9 7</b> . <b>3 7</b> .	8.7           2           5         2           6         PS           .8         11           .1         11           .7         11           .8         9           1         8           4         7           3         6	7.9       quescent       00     2       3.4     1       1.3     1       0.6     8       3.1     7       0.5     6       7     6       5.5     5	7.2       ent Des       225     2       SIG     P       4.3     2       2.1     1       0.3     9       5.8     5.3       5.9     9	6.7 <b>iccant</b> <b>isiccant</b> <b>isiccant</b> <b>isiccant</b> <b>i</b> <b>i</b> <b>i</b> <b>i</b> <b>i</b> <b>i</b> <b>i</b> <b>i</b>	6.2           Tablet           75         300 PSIG           12         11.1           0.2         9.5           8.7         8           .3         6.8           .2         5.7           .7         5.3           .4         5           5         4.6	5.5 350 PSIG 9.8 8.3 7.1 6 2 5 4.7 4.4 4.1	5 400 PSIG 8.7 7.4 6.3 5.4 4.5 4.2 3.9 3.7	4.2 500 PSIG 7.3 6.2 5.3 4.5 3.8 3.5 3.3 3.1	3.1       750       PSIG       5.3       4.5       3.8       3.3       2.8       2.6       2.4       2.3	1000 PSIC 4.3 3.7 3.1 2.7 2.3 2.1 2 1.8
40°F 35°F 35°F 75°F 75°F 65°F 56°F 56°F 55°F 52°F	83 68 10 PSIG 128 108 91 77 65 60 56 52 48	53 44 25 PSIG 81 69 59 49 41 38 37 33 31	32 27 50 PSIG 50 42 36 30 25 23.4 21.7 20.3 18.9	24 19.6 <b>75</b> <b>PSIG</b> 36 31 26 21.9 18.4 17.1 15.9 14.8 13.8	18.8           15.5           Type           29           24.2           20.4           17.2           14.5           13.5           12.5           11.7           10.9	13           125           PSIG           23.7           20           177           14.3           12.1           11.2           9.7           9	11.1           um Ch           15           PSI           7         20.           17.           14.           3         12.           4         10.           2         9.6           8.5         8.5           7.1         7.1	9.8 Iloride 0 17 G PSI 2 17 2 15 5 12 2 10 3 9. 6 8. 9 7. 3 7. 7 6.	8.7           2           5         2           6         Ps           .1         13           .7         11           .8         9           1         88         9           1         88         9           1         88         9           3         66         8           8         6         6	7.9       QUESCE       SiG     2       5.8     1       3.4     1       1.3     1       .6     8       .1     5       .5     2       .1     5       .1     5	7.2       Image: state stat	6.7 <b>iccant</b> <b>250</b> <b>256</b> <b>13</b> <b>13</b> <b>1</b> <b>1.1</b> <b>1</b> <b>1.1</b> <b>1</b> <b>1</b> <b>1.2</b> <b>13</b> <b>1</b> <b>1</b> <b>1</b> <b>1</b> <b>1</b> <b>1</b> <b>1</b> <b>1</b>	6.2           Tablet           75         300 Psic           12         11.1           0.2         9.5           3.7         8           .3         6.8           .2         5.7           .7         5.3           .4         5           5         4.6           .7         4.3	5.5 350 PSIG 9.8 8.3 7.1 6 5 4.7 4.4 4.4 4.1 3.8	5 400 PSIG 8.7 7.4 6.3 5.4 4.5 4.2 3.9 3.7 3.4	4.2 500 PSIG 7.3 6.2 5.3 4.5 3.8 3.5 3.3 3.1 2.9	3.1         750         PSIG         5.3         4.5         3.8         3.3         2.8         2.6         2.4         2.3         2.1	100 PSIC 4.3 3.7 3.1 2.7 2.3 2.1 2 1.8 1.7
40°F 35°F 35°F 75°F 75°F 65°F 58°F 58°F 56°F 54°F 52°F 52°F	83 68 10 PSIG 128 108 91 77 65 60 56 52 48 45	53 44 25 PSIG 81 69 59 49 41 38 37 33 31 29	32 27 <b>50</b> <b>PSIG</b> 50 42 36 30 25 23.4 21.7 20.3 18.9 17.5	24 19.6 <b>75</b> <b>PSIG</b> 36 31 26 21.9 18.4 17.1 15.9 14.8 13.8 12.8	18.8           15.5           Type           100           PSIG           29           24.2           20.4           17.2           14.5           13.5           12.5           11.7           10.9           10.1	13           125           PSIG           23.7           20           17           14.3           12.1           11.2           10.5           9.7           9           8.4	11.1           um Ch           15           PSI           7         20.           17.           14.           3         12.           2         9.6           8.3         8.3           8.3         7.7           7.1         7.1	9.8           Iloride           0         17           0         17           2         17           2         15           5         12           2         10           3         9.           6         8.           9         7.           3         7.           7         6.           2         6.	8.7           E Delic           5         2           6         Ps           .1         11           .7         11           .8         9           1         88           4         7           8         6           8         6           4         5	7.9       QUESCE       Sild       3.4       1.3       1.3       1.3       7       6       7       6       5.5       6       7       6       5       5       6       7       6       8	7.2       ent Des       225       316       P       4.3       2.1     1       0.3       3.7       7.4       5.8       5.3       5.9       5.5       5.1	6.7       Siccant       250     2       Sig     P       13     1       1.1     1       9.4     8       7.9     7       6.7     6       5.2     5       5.4     5       5     4       4.7     4	6.2       Tablet       75     300       813     9.5       8.3     6.8       9.2     5.7       7     5.3       .4     5       9.7     4.3       .4     4	5.5 350 PSIG 9.8 8.3 7.1 6 6 5 4.7 4.4 4.1 3.8 3.5	5 400 PSIG 8.7 7.4 6.3 5.4 4.5 4.2 3.9 3.7 3.4 3.2	4.2           500           PSIG           7.3           6.2           5.3           4.5           3.8           3.5           3.3           3.1           2.9           2.7	3.1         750         PSIG         5.3         4.5         3.8         3.3         2.8         2.6         2.4         2.3         2.1         2	2.0 100 PSIC 4.3 3.7 3.1 2.7 2.3 2.1 2 1.8 1.7 1.6
40ºF 35ºF 80ºF 75ºF 70ºF 65ºF 58ºF 56ºF	83 68 10 PSIG 128 108 91 77 65 60 56 52 48	53 44 25 PSIG 81 69 59 49 41 38 37 33 31	32 27 50 PSIG 50 42 36 30 25 23.4 21.7 20.3 18.9	24 19.6 <b>75</b> <b>PSIG</b> 36 31 26 21.9 18.4 17.1 15.9 14.8 13.8	18.8           15.5           Type           29           24.2           20.4           17.2           14.5           13.5           12.5           11.7           10.9	13           125           PSIG           23.7           20           177           14.3           12.1           11.2           9.7           9	11.1           um Ch           psid           psid	9.8 Iloride 0 17 G 25 12 15 5 12 2 10 3 9. 6 8. 9 7. 3 7. 6. 2 6. 2 6. 5.	8.7           2         2           5         2           6         PS           8         11           11         11           17         11           8         9           1         8           4         7           8         6           8         6           4         5           3         4	7.9       QUESCE       00     2       3.4     1       1.3     1       0.6     8       5.5     6       7     6       5.5     9       1     5       8     9       .7     4	7.2       ent Des       225     2       SIG     P       4.3     2.1     1       0.3     1       3.7     7.4       5.8     5.3       5.9     5.5       5.1     4.3	6.7           siccant           siccant           sig         2           13         1           1.1         10           9.4         8           5.7         6           5.8         5           5.4         5           5.4         4           4.7         4           3.9         3	6.2           Tablet           75         300 Psic           12         11.1           0.2         9.5           3.7         8           .3         6.8           .2         5.7           .7         5.3           .4         5           5         4.6           .7         4.3	5.5 350 PSIG 9.8 8.3 7.1 6 5 4.7 4.4 4.4 4.1 3.8	5 400 PSIG 8.7 7.4 6.3 5.4 4.5 4.2 3.9 3.7 3.4	4.2 500 PSIG 7.3 6.2 5.3 4.5 3.8 3.5 3.3 3.1 2.9	3.1         750         PSIG         5.3         4.5         3.8         3.3         2.8         2.6         2.4         2.3         2.1	100 PSIC 4.3 3.7 3.1 2.7 2.3 2.1 2 1.8 1.7

# Appendix B

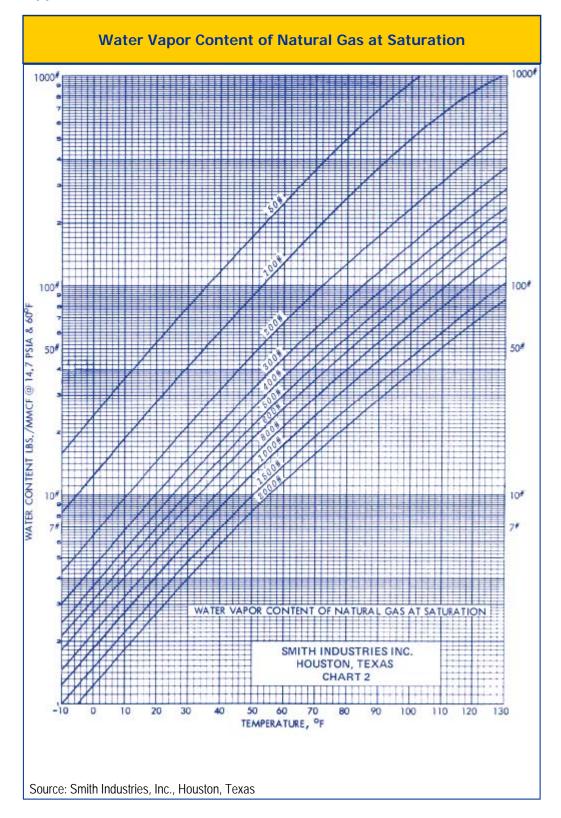



United States Environmental Protection Agency Air and Radiation (6202J) 1200 Pennsylvania Ave., NW Washington, DC 20460

October 2006

EPA provides the suggested methane emissions estimating methods contained in this document as a tool to develop basic methane emissions estimates only. As regulatory reporting demands a higher-level of accuracy, the methane emission estimating methods and terminology contained in this document may not conform to the Greenhouse Gas Reporting Rule, 40 CFR Part 98, Subpart W methods or those in other EPA regulations.